



SMART SENSOR 5.7 Installation & Operation Manual

IMPORTANT

READ INSTRUCTIONS ENTIRELY BEFORE INSTALLING THE SMART SENSOR 5.7

Congratulations! You have purchased the finest fresh water pump in the industry. The Smart Sensor 5.7 has been designed and engineered to provide you with “just like home” water flow.

MOUNTING

- Mount pump within 6 feet of tank for best performance.
- Mount pump for easy access if maintenance is required.
- Mount pump in a space of one cubic foot unless adequate ventilation is provided.
- The pump may be mounted in any position.
- Choose a solid surface that will not amplify pump vibration. Heat sink must be free and have air flow across.
- The mounting feet are intended to isolate the pump from the mounting surface; over tightening, or use of oversized screws will reduce ability to isolate vibration/noise.


ELECTRICAL

- The pump should be on a dedicated (individual) circuit protected by the specified fuse indicated on the motor label.
- A U/L approved marine duty switch (ignition protected) rated for 15 amps or higher is recommended, and must interrupt current flow on the positive (+ red) lead.
- Pump draws 15 milliamps when pump switch is on, even when pump is not running.

WARNING: 12V PUMPS

Test incoming power with a multimeter to check voltage polarity (red = +). Red pump wire **MUST** be connected to positive power or permanent damage to controller will result!!! Failures of these type are not covered under product warranty.

TYPICAL PUMP INSTALLATION

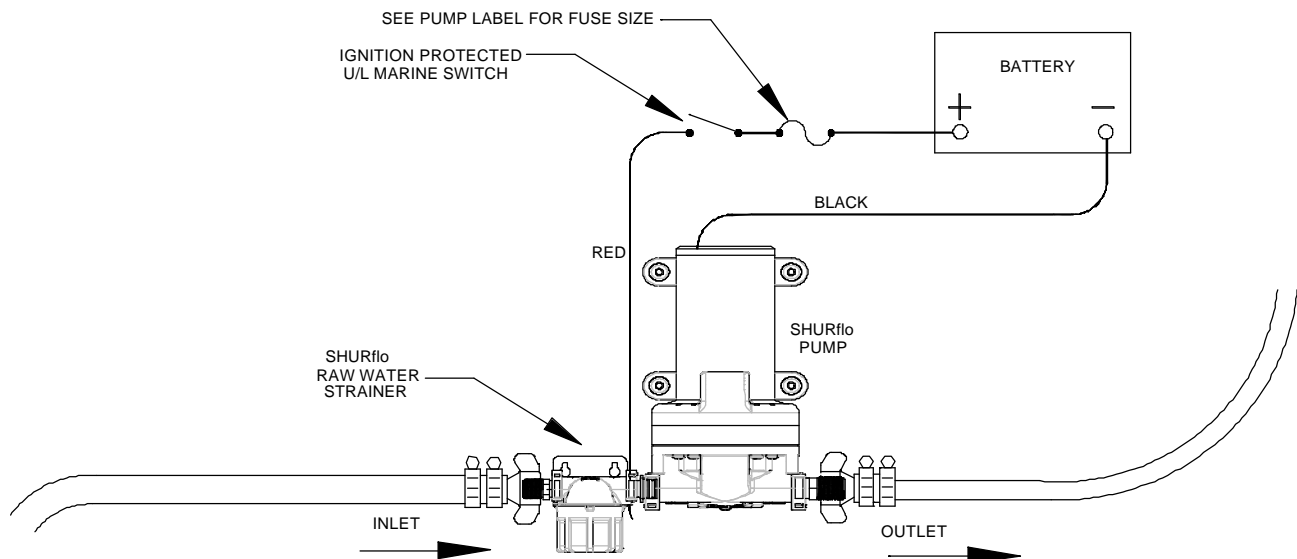


PLUMBING

Reducing unnecessary restrictions to the inlet and the outlet tubing will allow the pump to run freely, maximizing the Smart Sensor’s performance, quietness and eliminate the possibility of cavitation (starving the pump).

OPERATION & SHUT-OFF ADJUSTMENT

Pump cycling may be caused by excessive back pressure created by one or more of the following within a plumbing system:

- Low flow from partially open faucet.
- Water filters not on separate feed lines.
- Clogged water filters.
- Restrictive elbows shut-off and check valves
- Use as few elbows and valves as possible in the first two feet [.6M] after the pump.
- Flow restrictors in faucets and showerheads.
- Long lengths of small I.D. lines.
- Pipe/tubing should be at least 1/2" [13mm] I.D. from main lines.
- Restrictive fittings and connections (elbows, "T"s", feeder lines to faucet etc.)

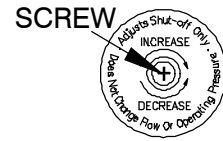

If the pump is cycling rapidly increase the setting by turning the screw clockwise (1/2 to 3/4 turn **MAX.**) If the pump continues to cycle after making the pressure adjustments contact SHURflo customer service.

- Installation of a 40 mesh strainer, such as SHURflo model 254 is recommended to prevent debris from entering the pump.
- SHURflo recommends at least 1ft. [.3 m] of 1/2" [13mm] I.D. flexible high pressure tubing to both ports. Ideally, the pumps ports and strainer **should not** be connected to plastic or rigid pipe. The pump's normal oscillation may transmit through rigid plumbing causing noise, and possibly loosen or crack components.
- SHURflo quick-connect fittings provide easy installation and removal if required. The fittings are designed with dual o-rings, creating a seal when snapped into place.
- Pump may flow better with 3/4" line feeding the pump.

FITTINGS INTALLATION INSTRUCTIONS


SHURflo quick connect fittings provide easy installation and removal if required. The fittings are designed with dual o-rings, creating a seal when snapped into place.



Pump clip original stage.



Step #1:
Place your thumb at the edge of the clip as shown.

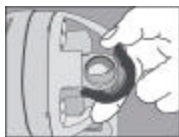

Step #2:
Using your thumb, pry up edge of lock clip over lock tab. (as shown)



Step #3:
Insert strainer or fitting into quick connect port, push all the way until stops.




Step #4:
Place your thumb on top of the clip as shown.




Step #5:
Snap lock clip over fitting and lock. Pull fitting to make sure is locked in. to place.

MODEL 254 STRAINER (Sold Separately)

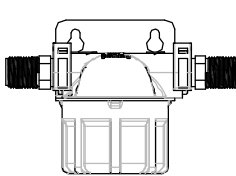


254-366
Remote Mount w/ Bracket

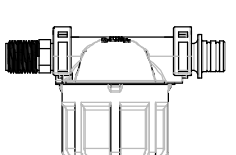

254-266
Direct To Pump Mount

FITTING KITS (Sold Separately)

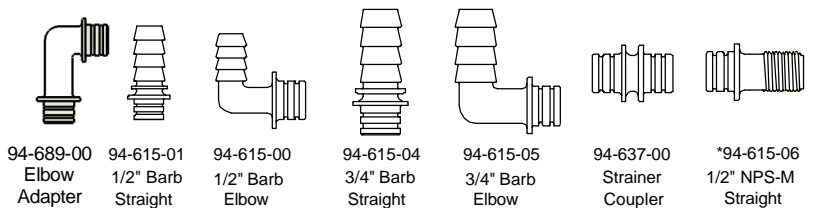

* Included with Aftermarket Extreme Pro Blaster pump kits.

WINTERIZING

NOTE: When used per the manufacturers recommendations *non-toxic antifreeze for potable water* is safe for use with SHURflo pumps. **Make sure all components in the system are compatible. Hot water heaters and filters must be drained and by-passed when using potable water anti-freeze.** Refer to the manufacturer and other equipment manufacturers for their specific winterizing & drainage instructions.



WARNING

Do not use Automotive Antifreeze to winterize potable water systems. Such solutions are highly toxic. Ingestion may cause serious injury or death. To properly drain the system, perform the following:

1. Drain the water tank. If the tank doesn't have a drain valve, open all faucets and let pump run until the tank is empty.
2. Open all the faucets (including the lowest valve or drain in the plumbing) and allow the pump to purge the water from the plumbing system, and then turn the pump OFF.
3. Using a pan to catch the remaining water, remove the plumbing at the pump's inlet/outlet ports. Turn the pump ON, allowing it to operate until the water is expelled. Turn OFF power to the pump once the plumbing is emptied. Do not reconnect pump plumbing. It is o.k. to lightly cover plumbing ends to prevent bugs from entering the system.

Make a note at tank filler as a reminder: "Plumbing is Disconnected".

4. All faucets should be left open to guard against any damage.
5. Potable water anti-freeze may be poured into drains to protect p-traps and waste system from freezing.
6. Fill system and **sanitize** before use in the spring.

SANITIZING

Sanitizing is recommended prior to storing and before using the water system after storage. Systems with new components, or ones subjected to contamination, should also be disinfected as follows:

NOTE: This procedure is in conformance with the approved procedures of ANSI A119.2.

1. Use one of the following methods to determine the amount of common household bleach needed to sanitize. A) 1-1/2 ounces of bleach per 10-gallon tank size. Example: 40 gallon tank = $4 \times 1.5 = 6$ ounces of bleach. B) Multiply "Liters of tank capacity" by 1.0; the result is the milliliters of bleach needed to sanitize the tank.
2. Mix the proper amount of bleach within a 1-gallon container of water.
3. Pour the solution (water bleach) into the tank and fill the tank with potable water. Rock vehicle back and forth to splash water on tank walls and top.
1. Open **all** faucets (Hot & Cold) allowing the water to run until the distinct odor of chlorine is detected.
2. The standard solution must have four (4) hours of contact time to disinfect completely. Doubling the concentration of bleach allows for contact time of one (1) hour.

When the contact time is completed, drain the tank. Refill with potable water and purge the plumbing of all sanitizing solution.

Troubleshooting

PUMP WILL NOT START/BLOWS CIRCUIT

- Electrical connections, fuse, breaker, main switch, and ground connection.
- Is the motor hot? Thermal protector may have triggered; will reset when cool.
- Is voltage present at the pump?
- Charging System for correct voltage (9-14) and good ground.
- For an open or grounded circuit or motor; improperly sized wire.
- For seized or locked diaphragm assembly (water frozen?)
- Is wire size too small? Minimum 14 AWG wire required.

WILL NOT PRIME/SPUTTERS: (No discharge / Motor runs)

- Is the strainer clogged with debris?
- Inlet cavitation from restrictions, small tubing? Outlet restrictions?
- Is there water in the tank, or air in the hot water heater?
- Is the inlet plumbing sucking air in air at connections (vacuum leak)?
- Is the inlet/outlet plumbing severely restricted or kinked?
- Proper voltage with the pump operating (9 - 14 volts).
- For debris in pump inlet/outlet valves or swollen/dry valves.
- Pump housing and drive assembly for cracks or loose screws.

PUMP WILL NOT SHUT OFF/RUNS WHEN FAUCET IS CLOSED


- Output side plumbing for leaks, and inspect for leaky valves or toilet.
- For air trapped in outlet side (water heater) or pump head.
- For bad transducer or transducer wire connections.
- For loose drive assembly or pump head screws.
- Are the valves held open by debris or swollen?

LEAKS FROM PUMP HEAD OR COVER

- For switch diaph. leaking under cover.
- For pucture diaphragm if water is present in the drive.
- Leaks from fitting? Check o-ring in groove?
O-ring lubricated properly?

NOISY OR ROUGH OPERATION

- For plumbing which may have vibrated loose.
- Is pump plumbed with rigid pipe causing noise to transmit?
- Does the mounting surface amplify noise?
- For mounting feet that are loose or compressed too tight.
- For loose pump head to motor screws.
- For air in system.
- The motor with pump head removed. Is noise from motor when it runs alone?

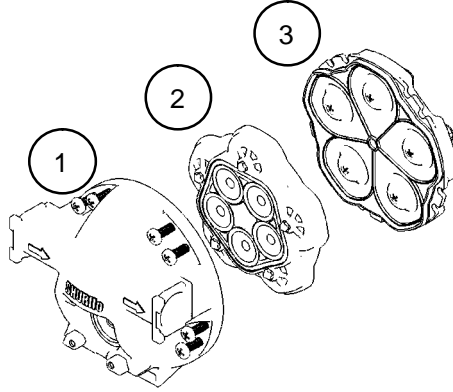

Smart Sensor Service Kits

Number	Components	Parts Kits
1	Upper Housing	94-670-02
2	Valve Assembly	94-030-01
3	Drive Assembly	94-030-02

LIMITED WARRANTY

SHURflo warrants its 5901 Potable Water pumps to be free from material and workmanship defects under normal use and service for a period of three (3) years from the date of manufacture indicated on the motor nameplate. The limited warranty will not apply to pumps that were improperly installed, misapplied, or are incompatible with components not manufactured by SHURflo. Pump failure due to foreign debris is not covered under the terms of this limited warranty. SHURflo will not warrant any pump that is physically damaged, or altered outside the SHURflo factory. Warranty claims may be resolved by an authorized dealer service center, or by a SHURflo service center. Returns are to be shipped with charges pre-paid. Package all returns carefully. SHURflo will not be responsible for freight damage incurred during shipping to a service center. For complete Limited Warranty details, please contact SHURflo.



- ES** Favor de referirse a www.shurflo.com para instrucciones de la instalación del producto y su operación, disponible en varios idiomas.
- DE** Mehrsprachige Hinweise zu Installation und Betrieb des Produktes finden Sie unter www.shurflo.com
- IT** Fare riferimento al sito www.shurflo.com per manuali multilingue di installazione ed utilizzo prodotti.
- UK** Veuillez vous référer au site www.shurflo.com pour l'installation produit multilingue ainsi que pour le mode d'emploi.
- FR** Please refer to www.shurflo.com for multi-lingual product installation and operating instructions'

SHURflo reserves the right to update specifications, prices, or make substitutions.



SHURflo, LLC Headquarters

5900 Katella Avenue
Cypress, California 90630
Phone (562) 795-5200 • Toll Free (800) 854-3218
Fax (562) 795-7564

SHURflo, LLC East

52748 Park Six Court
Elkhart, Indiana 46514-5427
Phone (562) 795-5200 • Toll Free (800) 854-3218
Fax (574) 264-2169

SHURflo Europe, Middle East, Africa

Pentair Water Belgium bvba,
Industriepark Wolfstee, Toekomstlaan 30
B-2200 Herentals, Belgium
Phone +32-14-283500 • Fax +32-14-283505